GENERAL MAINTENANCE CHECKLIST

Below is the list I've been keeping up on for the past few years with my 2016 View 24V - just a gentle reminder that your RV needs some love on a regular basis.

Most up-to-date version with links here: http://www.winnieview.com/tips.html#checklist

BEFORE EVERY TRIP

- □ Tires: pressure 61 psi (cold tire temp 65-70F), cracks, bubbles
- □ Chassis exterior lights: running, brake, signals
- □ Toad exterior lights (from RV leads): running, brake, signals
- Chassis fluids: fuel, oil, brake, transmission, windshield washer, DEF
- □ Miles until next engine service
- □ House electrical system: generator, solar panels charging capacity, inverter, DC/DC charger
- □ Fresh water level and water pump: I usually travel at 1/3 tank unless boondocking
- □ Refrigerator on and working
- □ Propane and smoke detectors operational
- □ Insect/dauber water heater and heater screens in place

MONTHLY

Generator: run at least 10 minutes under load

SEMI-ANNUAL

- □ Check chassis and coach batteries: Remove any corrosion around terminals. If not maintenance free, check water/acid level (top-off with distilled water).
- □ Check breaker box: remove front cover and ensure no burnt wires, that breakers and wires are tight
- □ Whenever exterior wash
- □ Clean solar panels light soap and water only
- □ Inspect roof: loose vents, screws, hoods, etc.; Dicor LAP sealant cracks, pits.
- □ Clean A/C filters and vents
- □ Treat slide rubber seals (inside and out) with normal cornstarch baby powder just grab an old sock and fill 1/4 with baby powder, rub on to apply
- □ Replace sink drinking water filter
- □ Main house door: lube hinges, clean sensor contacts with eraser
- Check Toad's base plate: clean rust and paint if necessary, tighten bolts
- □ Lube all joints on the entry steps with Dry Lube.



ANNUAL

- □ Water System maintenance
- □ Check/Clean/Replace water pump filter screen and O'ring
- □ Check/Clean awning and gutters
- □ Check/Clean roof A/C under-hood area including radiator fins. Foam spay to loosen the grime and fin comb to ensure the fins are straight.
- □ Annual wash
- □ Lube slide rollers and gear rails (dry lube)
- □ Lube both side mirror folding arms with (dry lube)
- □ Check/replace TPMS batteries, caps, and seals
- □ Check spare tire mounts, lube holding bolts, and air pressure
- □ Check/replace exterior sealant around garage bay doors, door and side trim
- □ Check/replace grey waste valve coupler and Bladex valve, black waste coupler and Bladex valve for cracks, leaks, and seals
- □ Replace house thermometer batteries (fridge and water heater area remote sensors too)
- □ Perform Refrigerator Maintenance

EVERY FIVE YEARS

- □ Replace propane sensor
- Replace the two sewer Mini-Vent Air Admittance Valves located under the kitchen and lavatory sinks

AS INDICATED/NEEDED

- Generator engine maintenance: 150 hours or once a year, whichever comes first: change oil,
 250 hours: air filter, 500 hours: spark plug
- □ Chassis engine service. The service intervals for Service A and Service B on the Sprinter are 20,000 between each. See: <u>http://www.winnieview.com/tips.html#service</u>

